



LUXURY METALS

PREMIUM EXTERIOR METAL VENTS



WIND DIRECTIONAL CHIMNEY CAP MAINTENANCE



SPARTY HELPS YOU STOP SMOKING!



WIND CAP CHIMNEY TOP

Luxury Metals Wind Directional Chimney Cap Installation & Maintenance

Wind directional cap hoods cannot be assembled incorrectly, due to the varied bolt size on the mounting plate.

- *Unscrew the wing nuts and position the hood on the flat portion of the spindle*
- *Insert the threaded ends through the holes and tighten the wing nuts with pliers*
- *Larger model caps have a metal tab that must be bent around the spindle to secure the top cap in place*
- *Use a carpenter level to make sure that the cap base is level on the pipe*
- *Use sheet metal screws to secure the round collar to the chimney pipe and test the cap for proper swivel action*
- *Most Wind Caps will never need maintenance, although excessive use will require creosote cleaning and periodic greasing*
- *If cap becomes sluggish, clean chimney soot from under the hood and apply high temperature grease to grease zerk*
- *High temperature grease (450 degrees or higher) can be found at most automotive repair shops as well as fuel wholesalers*

To Order Visit: www.luxurymetals.com or Phone: 206-406-7346